## TENT CLASSROOM QuickStart

**REMOTES, MICS AND BATTERIES ARE FOUND** IN THE PROJECTOR CART CABINET. THE EPSON **REMOTE TURNS ON THE PROJECTOR. THE CAMERA REMOTE MOVES THE CAMERA. YOU MUST USE THE** CLIP ON MIC FOR REMOTE STUDENTS TO HEAR YOU.

**Connects Your Laptop** to the Projector




**Connect Your Laptop** to the labelled HDMI cable to the labelled USB Cable

to the Camera USB


**Connects Your Laptop** 

**Connect Your Laptop** 

**Connects Your Laptop** to the Microphones

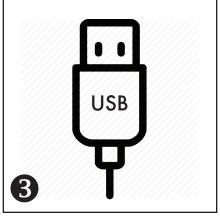

**Connect Your Laptop** to the labelled USB Cable

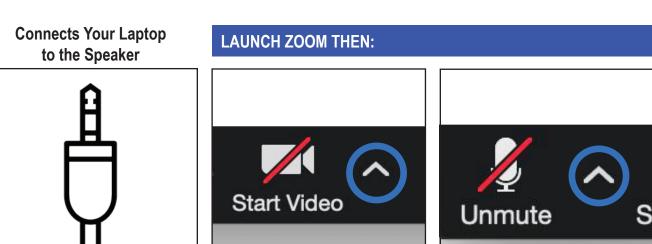

**Connect Your Laptop** to the Headphone Cable.

Select Your Camera

**Select Your Microphone** and Speaker

6

What do I select in Zoom ?





**4**))

[4]

Your Microphone on a Mac & Windows is: "Zoom U-22"

Your Speaker on a Mac & Windows is: "Headphones"

5

## **<u>TENT CLASSROOM</u>** Other Features

## TOP TENT TIP!

Each tent setup contains a clip on microphone. This is how remote students hear you. A separate condensor mic is positioned in the middle of the tent to pick up students. You must use the clip on for your remote students to hear you clearly. Heavy rain or wind will impair audio clarity.



PLEASE PLUG THE MIC IN WHEN YOU ARE DONE.

LEAVE THE MIC.

**Power on the mic.** Hold down this button until the blue light illuminates

Remote Student Volume: Control the volume of your remote students using the laptop volume control.

The camera is controlled with a remote, found in the cabinet. The camera can be panned, tilted and zoomed with this remote.

The projector is turned on and off with a remote, found in the cabinet. It will read "Epson". Press "Stand By" to turn the projector off.

Please cover the projector and camera when done for the day.

HDMI adapters and USB adapters (for Macs) can be borrowed or obtained from the ITS Service Desk.