



# AUTO TRACKING CAMERA QuickStart

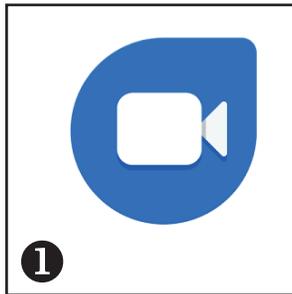


## CAMERA AND MICROPHONE ZOOM SELECTIONS




Launch Zoom

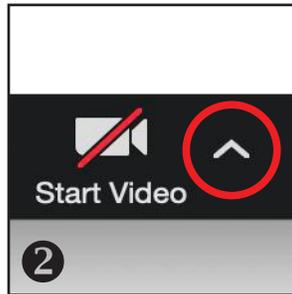

Select Camera:  
USB VIDEO

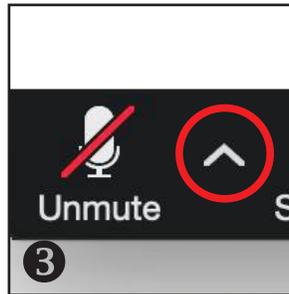

Select Microphone:  
Zoom U-22 Driver

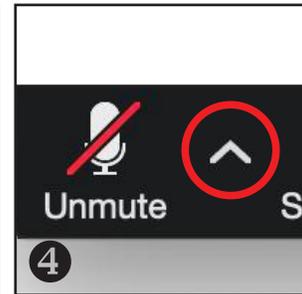

Select Speaker:  
See sticker below

## Speaker Selection

PLACE ZOOM SPEAKER STICKER HERE



Don the lav mic.



Power on the lav mic\*.

The lavalier mic is supplemented with additional external ceiling mic(s) in this room (to pick up the audience). All mics transmit audio to Zoom. The lav may also be used for voice reinforcement. Use the touch panel in the room to control mic volume in the room.

Need more assistance? Contact the ITS Service Desk at 315.228.7111 or email at [itshelp@colgate.edu](mailto:itshelp@colgate.edu)


## AUTO TRACKING CAMERA

# Other Features

 A small monitor is provided at the podium to display what the camera sees.

 The lav mic is your microphone. This is how remote participants hear you.

 Use the touch panel volume controls to increase remote and room volume.

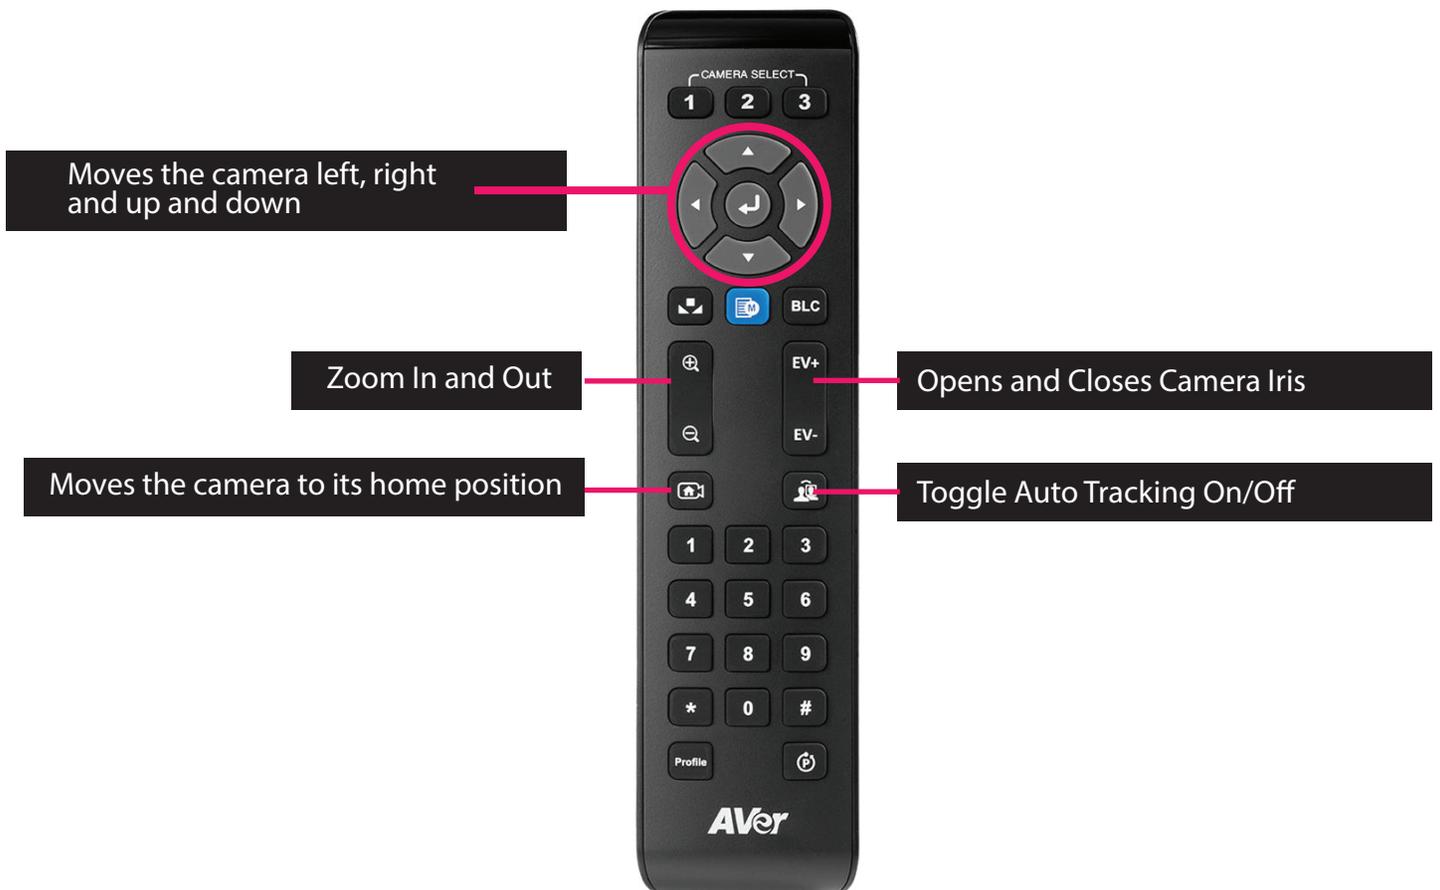

 Aim the remote at the camera (not the lecturn or computer).

 The lav mic is sensitive. Clip it 6" below your chin, and place centered.

 To use the auto tracking feature, stare at the camera for a 2-3 seconds. It will find you and begin tracking as you move.

**NOTE:** The camera will not auto track nor perform well in low light.

Need more assistance? Contact the ITS Service Desk at 315.228.7111 or email at [itshelp@colgate.edu](mailto:itshelp@colgate.edu)